

Standard Pedal Installation


Instruction Manual

PP002

Please read all instructions before installing your new pedals.

Warning

Failure to install pedals properly may result in damage to your bicycle, serious injury, and/or death.

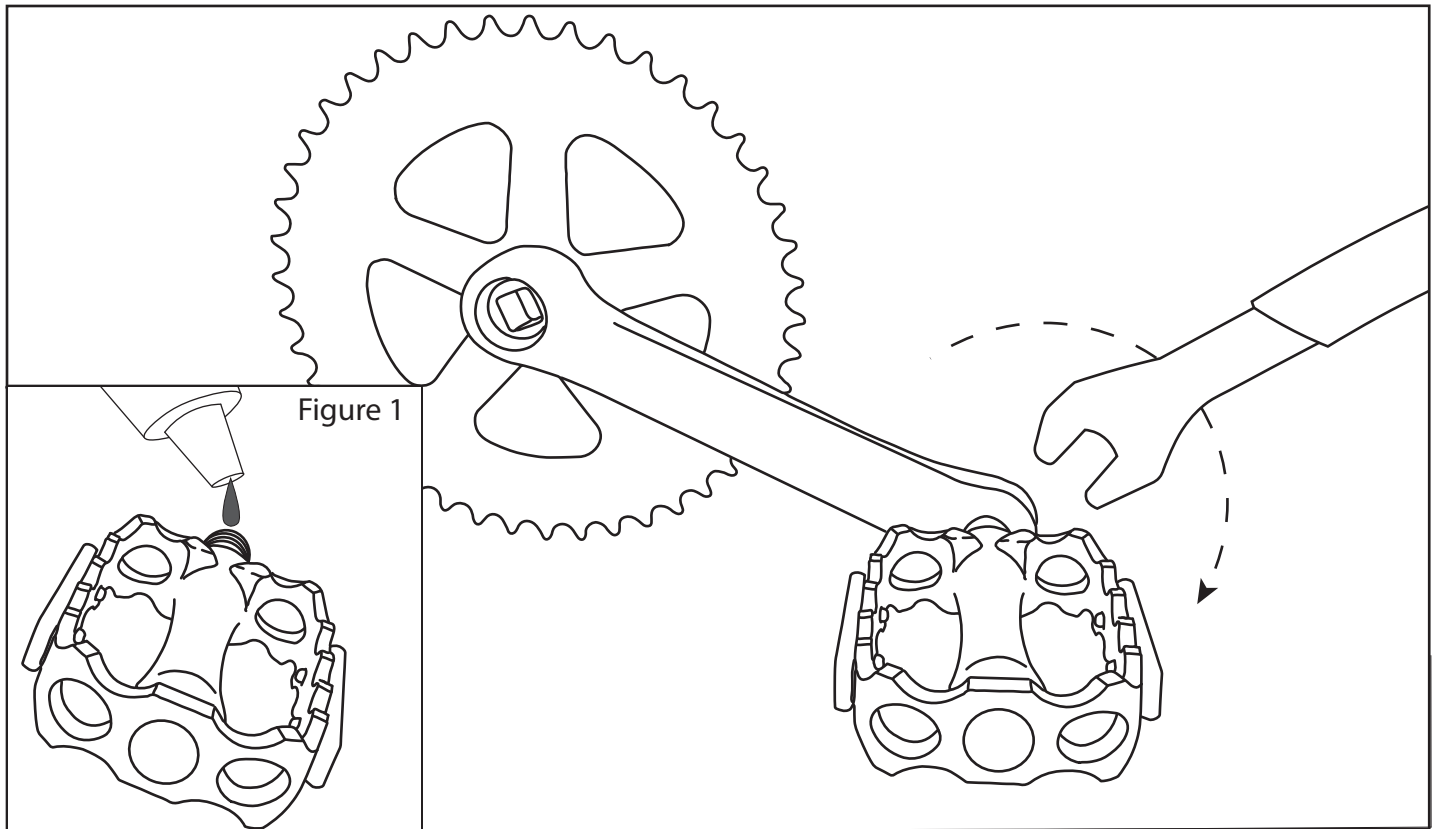

Please Note:

Pedals have left and right threading. Forcing pedals to thread on the wrong side can damage the crankarm and/or pedals threads. Both left and right pedals tighten by turning toward the front of the bike.
The LEFT pedal can be identified by an L on the threaded end of the spindle.

Installation

1. Remove old pedals and apply grease to the threads of the new pedals to be installed. **Figure 1**
2. Hand thread first pedal until the threads are engaged.
3. Finish tightening using a pedal wrench (not included) to a minimum of 33Nm.
4. Repeat process for other side.
5. Double check that both pedals are secure and fully tightened with no play.

SUNLITE